




Polaris RZR 800 Factory Replacement Air Filter

OTR PART# OR10513

OTR Air Filters are specifically designed and engineered in order to provide maximum performance and engine protection for your Polaris UTV. Positive filter sealing and ultra-high efficiency media ensure that no dust enters your engine.

1. Remove lid by unclamping the 3 snap clips
2. Remove existing air filter and plastic ring
3. Install the OTR Air Filter (See Image) by pushing the filter down onto the air box inlet
4. Reinstall lid onto the stock air box properly securing the OTR Air Filter in place (*OTR FILTER DOES NOT NEED A HOSE CLAMP TO BE SECURED, THE LID SECURES THE FILTER IN PLACE*)
5. **OPTIONAL:** See instructions below to install the hose clamp.

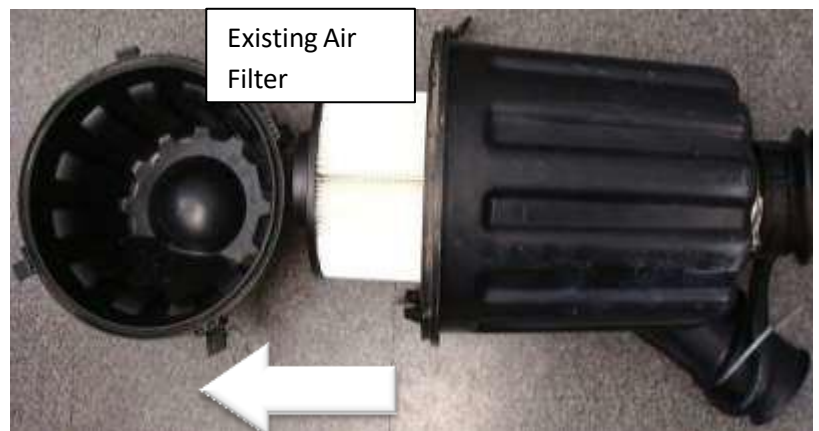

Existing Air
Filter Removed
and Plastic Ring


Air Box Inlet



OPTIONAL: Installing the hose clamp


(OTR FILTER DOES NOT REQUIRE A HOSE CLAMP FOR PROPER SEALING AND SECURE MOUNTING, THE LID SECURES THE FILTER IN PLACE)

1. Remove lid by unclamping the 3 snap clips
2. Remove existing air filter
3. Cut along the solid line of the included drilling template using scissors
4. Place drilling template on the largest pocket area of the stock air box (see image below)
5. Tape down the drilling template to guide you on drilling the hole
6. Center punch the center of the hole on the template
7. Use a ½" drill bit to drill the hole on the stock air box
8. Install the supplied hose clamp onto the OTR Air Filter, make sure the hose clamp does not move around when tightening it with the nut driver
9. Install the OTR Air Filter (See Image) by pushing the filter down onto the air box inlet
10. Using a nut driver, secure the hose clamp by inserting the nut driver through the drilled hole and tighten the hose clamp
11. Install the supplied gray silicone plug into the drilled hole
12. Reinstall lid onto the stock air box properly

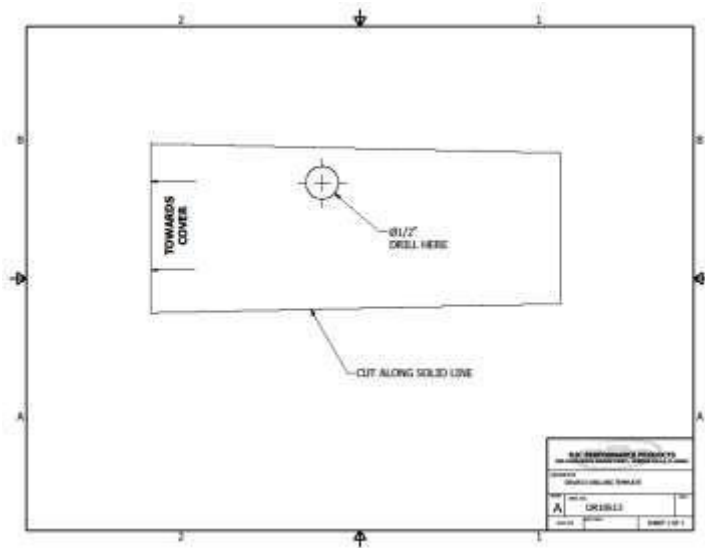

Included drilling template




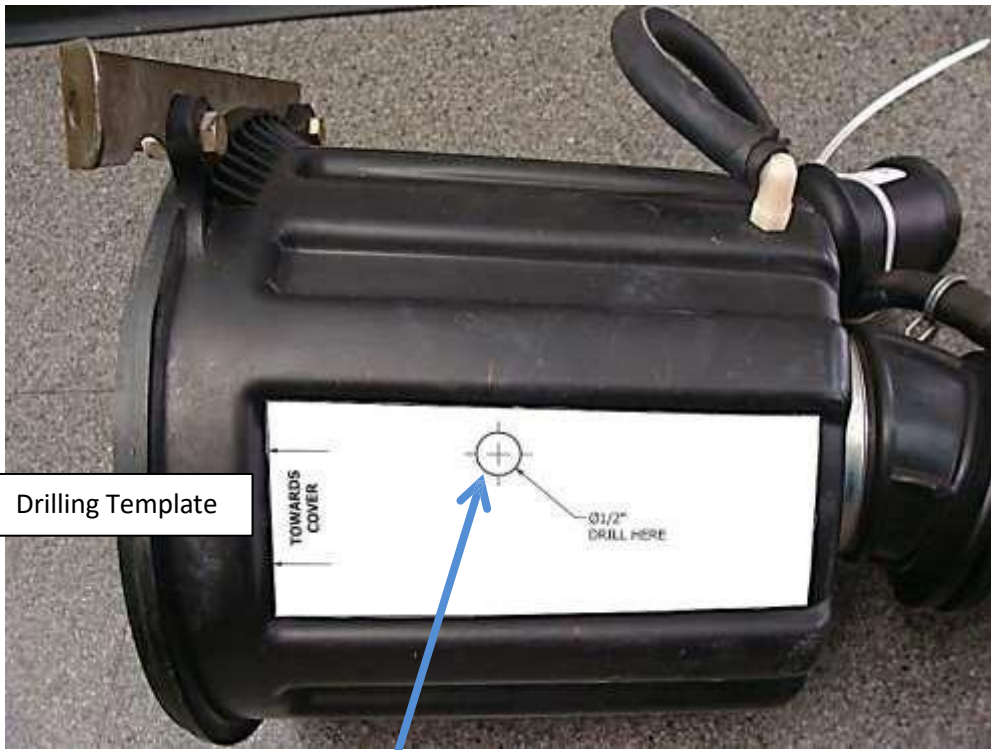

Drilling Template

Use tape to
secure the
drilling
template

Center punch the center of the hole on the template,
then drill the hole here

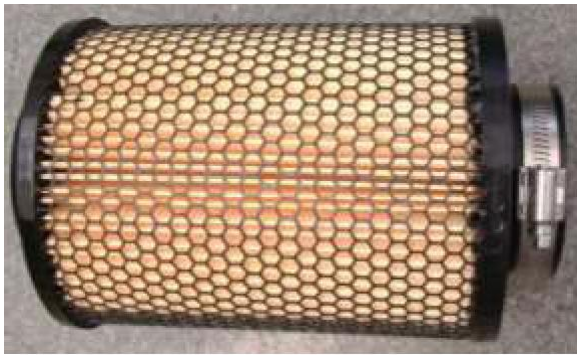

Included hose clamp




OTR Air Filter





Nut Driver

Using a nut driver, secure the hose clamp by putting the nut driver through the drilled hole and tighten the hose clamp

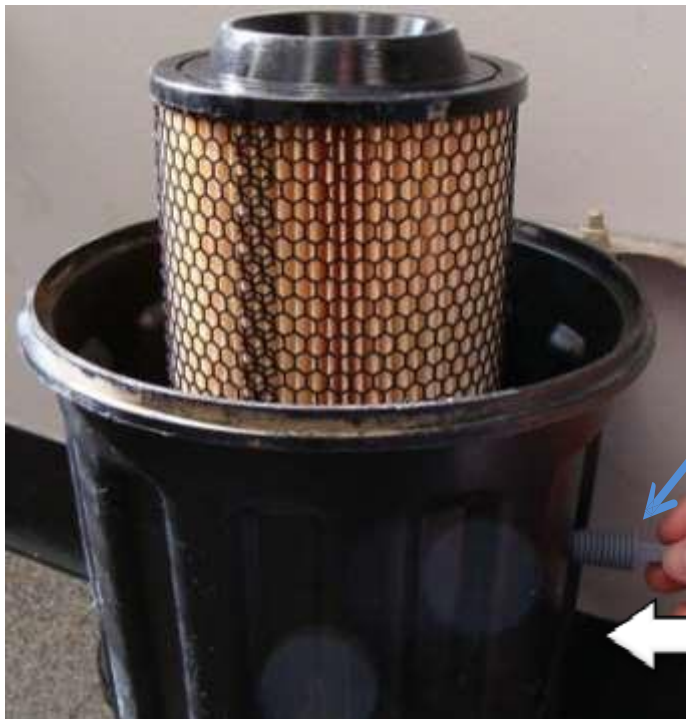

Silicone Plug

Secure the supplied silicone plug into the drilled hole

Never oil an OTR filter as this will only degrade the filter's performance.

OTR FILTERS

605 Tower Road
Mundelein, IL 60060
800-263-8660