



OTR HONDA TALON REPLACEMENT AIR FILTER KIT INSTALLATION INSTRUCTIONS

PART# OR10551



- REMOVE EXISTING STOCK AIR FILTER & O-RING FROM INLET SIDE OF STOCK HOUSING
- REMOVE THE TAPE FROM OTR SUPPLIED GASKET AND INSTALL IT INTO O-RING GROOVE
- PLACE THE OTR AIR FILTER IN THE AIR CLEANER HOUSING AND LINE UP THE AIR FILTER FLANGE HOLES WITH THE AIR CLEANER SCREW HOLES
- PLACE THE MOUNTING FLANGE ONTO THE AIR FILTER THEN LINE UP THE SCREWS WITH THE AIR CLEANER SCREW HOLES (NOTE: THE SCREWS ARE ATTACHED TO THE MOUNTING FLANGE WITH RETAINING WASHERS TO KEEP THEM FROM BEING MISPLACED OR LOST)
- UNIFORMLY TIGHTEN EACH OF THE (8) SCREWS AND THEN GIVE EACH AN ADDITIONAL HALF TURN

Never oil an OTR filter as this will only degrade the filter's performance.

OTR FILTERS
605 Tower Road
Mundelein, IL 60060
800-263-8660