

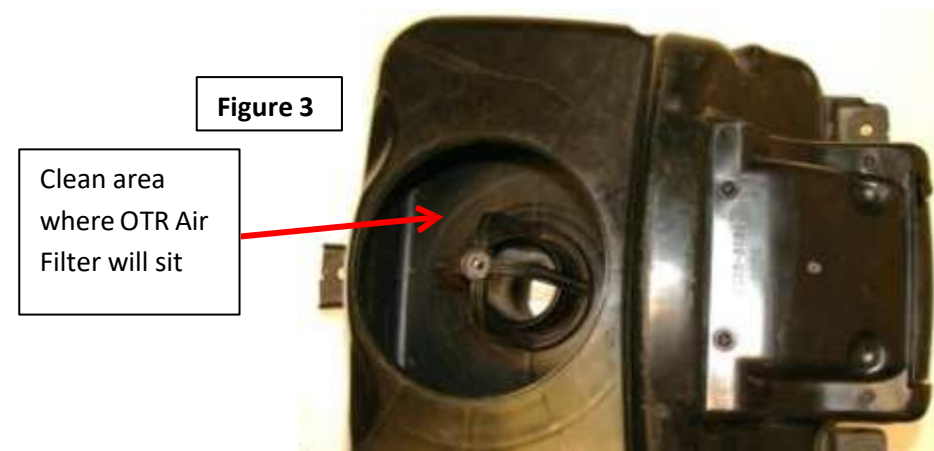


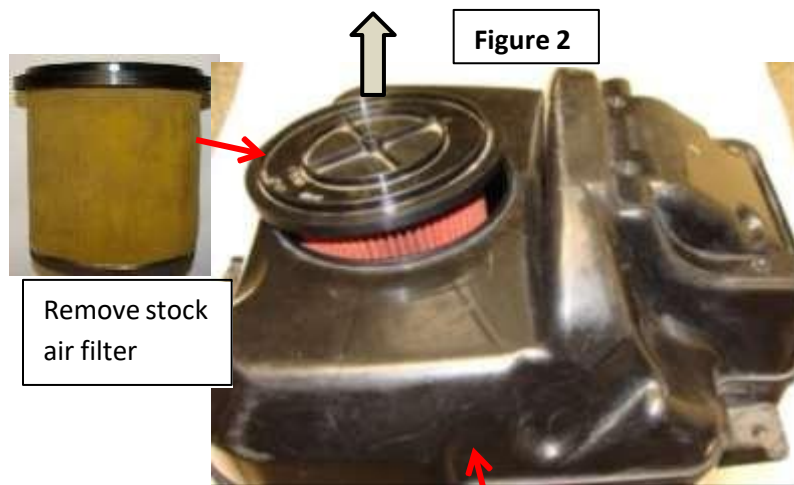



Suzuki King Quad Factory Replacement Air Filter PART# OR10534

OTR Air Filters are specifically designed and engineered in order to provide maximum performance and engine protection for your Suzuki ATV. Positive filter sealing and ultra-high efficiency media ensure that no dust enters your engine.

1. Remove stock wing bolt that holds the stock air filter. **(Figure 1)**
2. Remove the stock air filter from the stock air box. **(Figure 2)**
3. Clean the air filter sealing surface inside the base of the stock air box, where the new OTR air filter sits. **(Figure 3)**
4. Install the supplied OTR Gasket on the new OTR air filter cap groove as shown. Make sure the OTR Gasket is secure in the groove of the OTR air filter cap. **(Figure 4)**
5. Insert the OTR air filter into the stock air box as shown. **(Figure 5)**
6. Reinstall the stock wing bolt and tighten it securing the OTR air filter to the stock air box. **(Figure 6)**

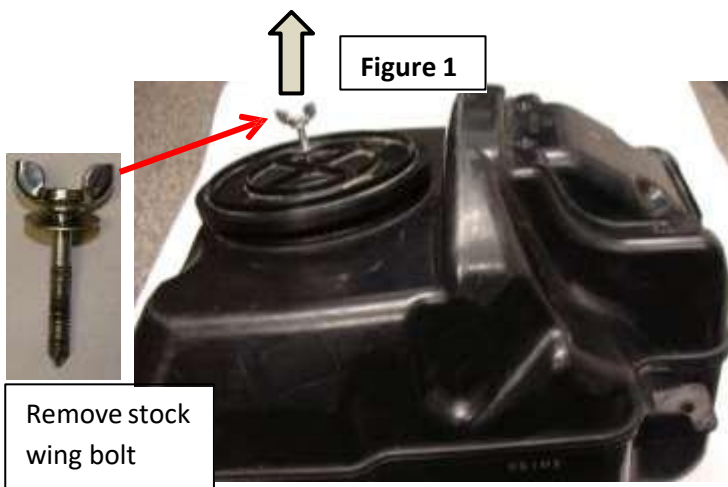

STOCK AIR BOX

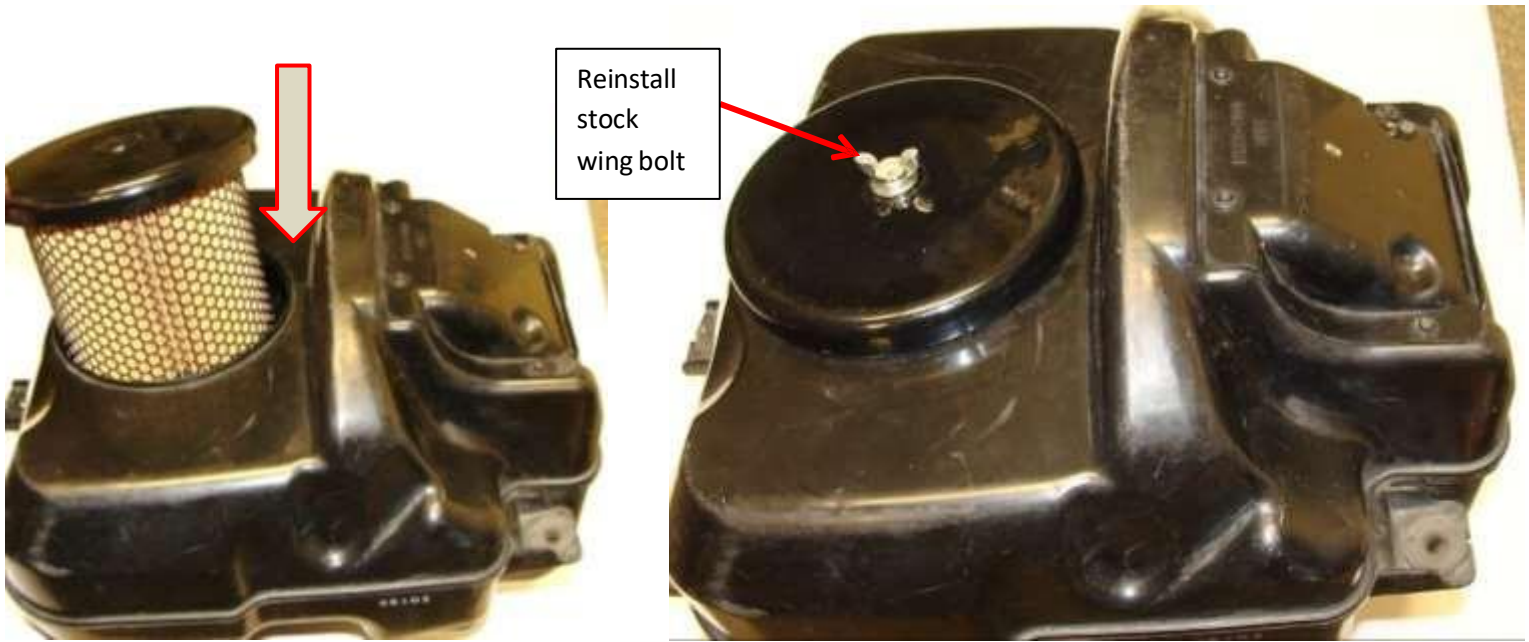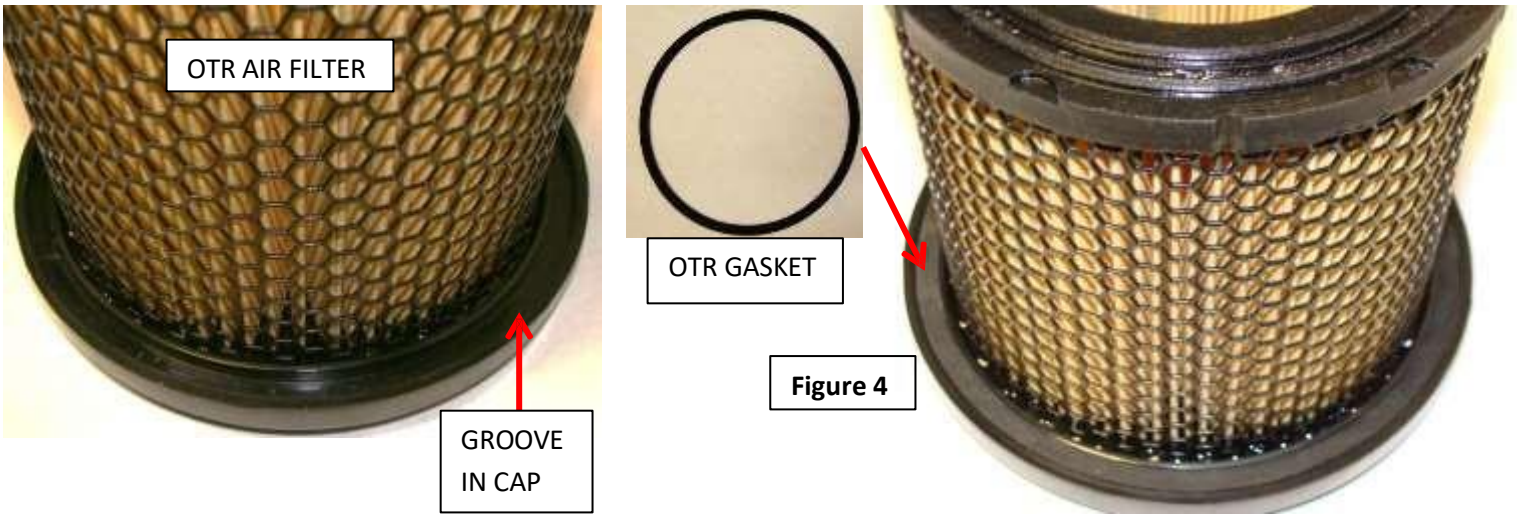

Never oil an OTR filter as this will only degrade the filter's performance.

OTR FILTERS
605 Tower Road
Mundelein, IL 60060
800-263-8660