



HONDA PIONEER 1000 REPLACEMENT AIR FILTER KIT INSTALLATION INSTRUCTIONS

OTR PART# OR10557



- REMOVE EXISTING STOCK AIR FILTER
- PLACE THE OTR AIR FILTER IN THE AIR CLEANER HOUSING AS SHOWN IN ABOVE PHOTO. MAKE SURE THE FILTERS FLANGE SEALING BEAD IS SEATED IN SEALING CHANNEL.
- NEXT INSTALL THE BREATHER CLAMP AS SHOWN IN THE PHOTO MARKED WITH THE SOLID YELLOW ARROW.
- TIGHTEN CLAMP SCREW FIRMLY MAKRED WITH THE YELLOW OUTLINED ARROW

Never oil an OTR filter as this will only degrade the filter's performance.

OTR FILTERS
605 Tower Road
Mundelein, IL 60060
800-263-8660